



INSTALL INSTRUCTIONS



ION Package

2 Layer Application - 7 Year Warranty

APPLYING ION BASE COAT

01

Take note of time before beginning.

Using a new blue microfiber applicator pad, prime pad with approximately 20 drops for the roof. All following door sized panels should require 7-9 drops (The hood would be considered the size of 2 panels).

02


Apply product using straight lines first up and down, then side to side (cross hatch method) to ensure even application. Allow product to permeate into the paint for 5 minutes prior to leveling.

03


Use low pile leveling microfiber towel to wipe area using light pressure to level the product by wiping in long horizontal motions. Flip towel as needed to ensure even distribution of product.

04

Use finishing pink high pile pink towel in light circular motions to final wipe surface, remove excess product and ensure even application and look.

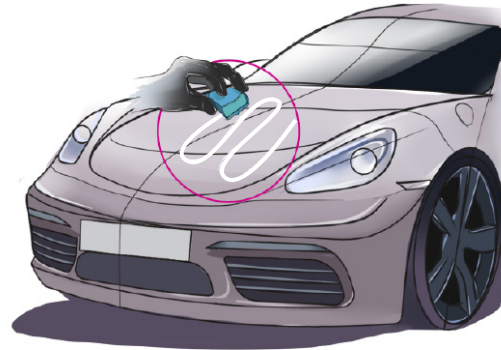

APPLYING ION BASE COAT

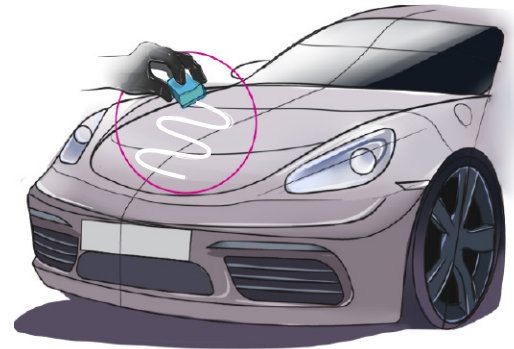

APPLYING ION TOP COAT

01

Wait 45-60 minutes from the time you began first layer of the first panel of Base Coat.

Begin on the same panel that you began on when applying ION base. Follow the exact same order of panels.

02

Using a new blue microfiber applicator pad, prime pad with approximately 20 drops for the roof. All following door sized panels should require 7-9 drops (The hood would be considered the size of 2 panels).

03


Apply product using straight lines first up and down, then side to side (cross hatch method) to ensure even application. Allow product to dwell for 5 minutes to perform ION exchange with Base Coat prior to wiping.

04

Use low pile leveling microfiber towel to wipe area using light pressure to level the product by wiping in long horizontal motions. Flip towel as needed to ensure even distribution of product.

05

Use finishing pink high pile pink towel in light circular motions to final wipe surface, remove excess product and ensure even application and look.

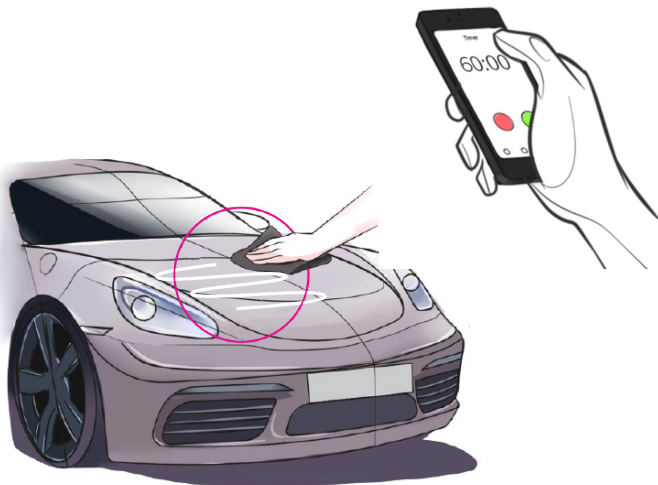

APPLYING ION TOP COAT



ULTIMATE ION Package

3 Layer Application - Lifetime warranty

APPLYING ION BASE COAT

01

Take note of time before beginning.


Using a new blue microfiber applicator pad, prime pad with approximately 20 drops for the roof. All following door sized panels should require 7-9 drops (The hood would be considered the size of 2 panels).

02

Apply product using straight lines first up and down, then side to side (cross hatch method) to ensure even application. Allow product to permeate into the paint for 5 minutes.

03

DO NOT LEVEL PRODUCT!

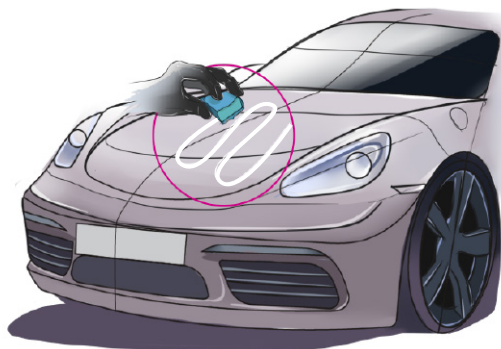

APPLYING ION BASE COAT

LAYERING ION BASE COAT

04

Continue using blue microfiber applicator pad, apply 7-9 drops per door sized panels. (The hood would be considered the size of 2 panels).

05



Apply product using straight lines first up and down, then side to side (cross hatch method) to ensure even application. Allow product to permeate into the paint for 5 minutes

06

Use low pile leveling microfiber towel to wipe area using light pressure to level the product by wiping in long horizontal motions. Flip towel as needed to ensure even distribution of product.

07

Use finishing pink high pile pink towel in light circular motions to final wipe surface, remove excess product and ensure even application and look.

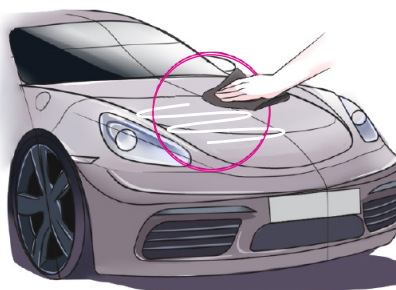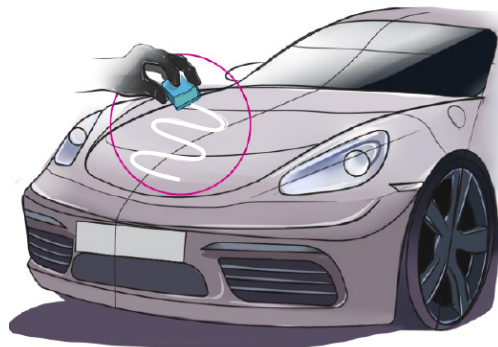

APPLYING ION TOP COAT



APPLYING ION TOP COAT

01

Wait 45-60 minutes from the time you began wiping second layer of the first panel of Base Coat. Begin on the same panel that you began on when applying ION Base Coat. Follow the exact same order of panels.

02

Using a new blue microfiber applicator pad, prime pad with approximately 20 drops for the roof. All following door sized panels should require 7-9 drops (The hood would be considered the size of 2 panels).

03

Apply product using straight lines first up and down, then side to side (cross hatch method) to ensure even application. Allow product to dwell for 5 minutes to perform ION exchange with Base Coat prior to wiping.

04

Use low pile leveling microfiber towel to wipe area using light pressure to level the product by wiping in long horizontal motions. Flip towel as needed to ensure even distribution of product.

05

Use finishing pink high pile pink towel in light circular motions to final wipe surface, remove excess product and ensure even application and look.